

**HEAVY DUTY DANA 44 STEERING KNUCKLE**


Reid Racing's high strength Dana 44 knuckles are designed to be a direct replacement for Chevy Dana 44 knuckles. They will also fit on early (pre 1987) Jeep Dana 30 and 44 axles with minor steering modification, 1978 to 1986 CJ front ends may need an aftermarket caliper mounting bracket. The knuckles will also fit on Ford 44 axles, but Chevy or Jeep "outers" will need to be used. "Outers" include spindles, hubs, bearings, rotors, calipers, caliper mounting brackets, and outer axle (stub) shafts.

**INSTALLATION**

Remove the original knuckles from the vehicle. The original spindle studs can be removed by striking them with a soft faced hammer. New spindle studs are available from Reid Racing (part # D44101K) if needed. Clean and inspect all the original parts, replacing any damaged or worn components. Using a hammer and punch, tap in 6 spindle studs from the back side of the knuckle until fully seated. Install the ball joints, then the knuckle on the vehicle according to a factory service manual making sure to torque all fasteners to the original specs.

**4th BOLT HOLE / HIGH STEER**

The "flat top" of the Reid Racing 44 knuckle has been raised 3/8" taller than the factory Chevy top. This helps raise the steering arms to aid in tie rod to leaf spring clearance. A 4th bolt hole has also been added to the top of the Reid Racing knuckle for use in high steer applications. Adding the 4th stud or bolt to your high steer arms will increase the strength of your steering. Use the drawing below to determine the location of the 4th hole on your steering arms and drill a 9/16" diameter hole. Mount the arms using blue loctite on the studs and torque them to 100 ft. lbs. Re-torque after the first outing.

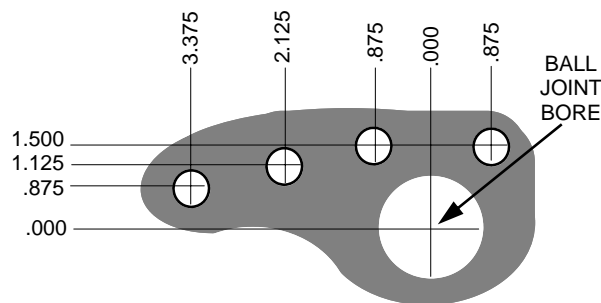

If you do not use high steer or do not want to modify 3 hole steering arms, simply do not use this bolt hole.

**STEERING STOPS**

The steering stops on Reid Racing knuckles are "cast in" to prevent the common bending of the stock style adjustable bolts. The stops are intentionally cast long so adjustments can be made by grinding the tips of the stops to fit. After the knuckles are installed and the toe in is set, cycle the steering back and forth grinding small amounts of the stop until the desired degree of steering is set. Make sure to check for u-joint binding and yoke to yoke interference at full lock in both directions; if binding or contact occurs, axle breakage will happen. If a stock style adjustable steering stop is desired, the cast in stop can be cut off at the knuckle then drilled and tapped for a 3/8" bolt.

**WARRANTY**

All "Off Road Products" sold by Reid Racing, Inc. are intended to be used for "off road" and "off highway" use only, and are NOT designed, manufactured or approved for use on any public road or highway. Due to the intended use of the products offered, all "Off Road Products" are sold without any warranties of fitness for purpose or use, merchantability, or any other kind, either expressed or implied, whether written or oral, by Reid Racing, Inc., or its past, present or future officers, directors, principals, agents, employees, legal representatives, trustees, parents, associates, affiliates, subsidiaries, division, partners, heirs, executors, administrators, purchasers, predecessors, or successors. The buyer of these "Off Road Products" bears and assumes the entire risk of loss or injury as to the fitness for purpose or use, merchantability, durability and performance of these "Off Road Products" and assumes the entire cost of any necessary maintenance, service or repair. Reid Racing, Inc. will not be liable for any subsequent, resulting or consequential damages, expenses, losses or injuries arising from or out of the use, misuse, or improper installation of any "Off Road Product".